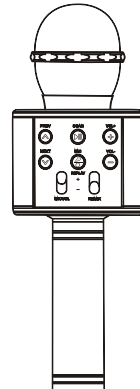



280mm

[illegible]

- ### I. Remote Operation
1. **Power On/Off**
Press: On/Off/Power Mode Switching.
 2. **Previous**
Press to access the previous song under MP3 mode.
Press self mode, press it to enable self function (only for iOS system mobile phone).
 3. **Next**
Press to access the next song under MP3 mode.
Press self mode, press it to enable self function (only for Android system mobile phone).
 4. **Play/Pause**
Press: Play/Pause, under FM state, hold it for automatic search.
 5. **M/C/Repeat**
Press: M/C/On/Off.
Hold: reply function under TF card play mode.
 6. **Volume Up**
Press: increase volume
 7. **Volume Down**
Press: decrease volume

3. Wireless Karaoke
 - 1. Hold  button to start the product.
 - 2. Wireless connection: insert the bluetooth mode of the mobile phone, click to connect. Successful connection if prompt tone is produced.
 - 3. Adjust sound: adjust the sound volume of mic and the reverberation to suitable level.
 - 4. Start Karaoke
8. Recording with mobile phone
 - 1. Connect the recording wire: insert the mic plug of the recording wire into the mic interface of karaoke trousseau, and the 3.5mm interface into the earphone jack of the mobile phone.
 - 2. Open the karaoke software in the mobile phone, such as: USING, Kugou Music or other recording APPs, select your table number and the song according to the above mentioned setting method.
 - 3. Test and save songs: operate according to the instructions of karaoke software.
9. Start function

Technical Parameters

Technical Parameters

- Output Power: 5W
- Frequency Range: 100Hz-10KHz
- Max Sound Pressure Level: >115dB
- T.H.D.<1%
- Reverberation Mode: sound effect reverberation
- Power Supply: built-in 18650 Li-battery
- Battery Capacity: 1200mAh
- Charging Power: DC 5V
- Input Power: 3.7V

7. The "XEROX SA TRADING COMPANY" (hereafter: *Products Manufacturer*, *Xero*) and *Ypsilon* and *Zeppelin* ("The Companies") make every effort to ensure the products meet the standards of the *German Product Liability Act* and the *German Consumer Protection Act*.
8. In addition, electronic devices which fall within the radio equipment category (e.g. NFC, mobile phones, etc.) are also covered by the *Radio Equipment Act* and the *Radio Equipment Regulations*, etc. (hereafter: *Radio Equipment Act*). Therefore, the *Products Manufacturer* is provided warranty period of 24 months for the products of the category of *radio equipment* (hereafter: *Radio Equipment*) (hereafter: *Radio Equipment*).
9. The *Products Manufacturer* is not responsible for the additional deployment of the products during the scheduled periods, the product will be replaced with the same or with another of the same specifications or reformed.
10. In any case, the consumer has all the rights provided by the regulations for force and more, such as the regulations of sale agreements.
11. The above warranty does not cover damage caused by:
- a. Incorrect, inappropriate or careless use to the product instructions, installation, use, maintenance or storage of the product;
 - b. Voltage power drop, conditions of incorrect operation or product exposed to inappropriate and unsuitable environmental conditions;
 - c. Accidents, accidents or other external causes, such as natural influences and interventions of all kinds of the buyer, third parties and/or misoperational and unauthorized person;
 - d. Normal wear of the product due to intended use.
12. The consumer has no responsibility for any injury and / or property damage (direct and consequential) may only occur from damage of part of the product caused by any of the above mentioned.

GB- HEREBY, THE MANUFACTURER (RITASC ELECTRONICS CO., LIMITED) DECLARES THAT (WIRELESS MICROPHONE HI-FI SPEAKER, ITEM NO.: WS-858) COMPLIES WITH THE ESSENTIAL REQUIREMENTS AND OTHER RELEVANT PROVISIONS OF DIRECTIVE 2014/53/EU.