RO

TROTINETĂ 145 XG

- Trotineta nu este o jucărie. Inițiați câștigați sub supravegherea unor persoane adulte.
- Nerecomandat copiilor sub vârsta de 36 de luni, conform pieselor mici cel puțin 8 ft.Ignorați mesajele de copii.
- A se utiliza doar de un copil per dată.
- Greutate maximă a utilizatorului: 100 kg. Dimensiune maximă: 4ft/100 kg.
- Verificați frânele înainte fie folosite utilizare și -după fiecare utilizare. Verificați și fixă toate șuruburile înainte fie folosite utilizare. Schimbați piesele uzate sau deteriorate imediat. Verificați regulat dacă roțile sunt bine strânse și dacă se rotesc ușor. Ungeți-le dacă este nevoie.
- A se utiliza cu echipament de protecție precum casca, genunchiere și coatiere.
- Nu folosiți niciodată produsul în apropiere de surse de apă.
- A se utiliza doar pe suprafețe uniforme, a nu se utiliza în traficul
- Evitați coborârea de margini, gropi de scurgere și modificați traiul de acțiunile. Trotineta se poate opri brusc.
- Evitați suprafețele cu apă, noroi, pietre, murdărie, frunze și alte resturi.
- Nu folosiți produsul pe timpul nopții sau în condiții de vizibilitate redusă. Controlați simțurile diminuează vizibilitatea, afectează frânarea.
- Evitați viteza excesivă, ce poate fi atinsă în panță.
- Respectați întotdeauna pietonii pentru controlul. Acționați controlul modul corect și legat de utilizare și siguranță.
- Verificați instrucțiunile restrânge de utilizare în conformitate cu reglementările de siguranță redactă.
- Nu folosiți produsul de deasemenea se se supraîncălzește în utilizarea continuă. Ca 5 atingeți după frânare.

CURĂȚARE

Curățați cu o cârpă umedă pentru a îndepărta praful și murdăria. Nu folosiți soluții de curățare sau solvenți care ar putea deteriora suprafața produsului. Uscați bine produsul și depozitați-l în un loc uscat și ferit de soare. Verificați și strângeți periodic șuruburile și piulițele pentru a menține siguranța și stabilitatea produsului. Ungeți ușor și curățați și se uscați trotineta după fiecare utilizare. Depozitați produsul în ambalaj de carton dacă nu este utilizat. Se pot folosi piese de rezervă originale.

ELIMINAREA

Produsul este destinat la un centru de colectare special. Vă rugăm să contactați autoritățile locale pentru informații suplimentare.
Conform standardului EN14619: Categoria A.

EN

Scooter Cruise 145 XG

ASSEMBLY INSTRUCTIONS

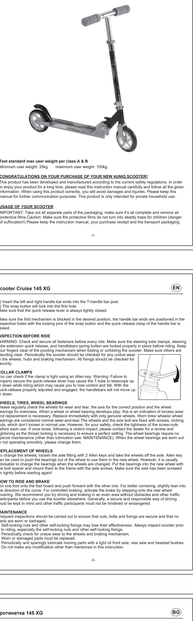

Test standard max user weight per class A & B
Maximum weight: 100kg. maximum user weight: 100kg.

CONGRATULATIONS ON YOUR PURCHASE OF YOUR NEW KIKING SCOOTER!
This product has been developed and manufactured according to the current safety regulations. In order to enjoy your product for a long time, please read this instruction manual carefully and follow all the given safety and maintenance instructions. Please keep the instruction manual for future application purposes. This product is only intended for private household use.

USAGE OF YOUR SCOOTER
IMPORTANT: Take out all separate parts of the packaging, make sure it's all complete and remove all packaging material. Do not use the product before it is fully assembled. Check all fasteners (and adjustment of suffication) Please keep the instruction manual, your purchase receipt and the transport packaging.

EN

Scooter Cruise 145 XG

PARTS IDENTIFIER

70111-1	HANDLE BAR GRIP	2
70111-2	FOLD MECHANISM	1
70112-3	QUICK RELEASE CLAMP	1
70112-4	FOLD MECHANISM	1
70112-5	FOOT BOARD	1
70112-6	FRONT WHEEL	1
70112-7	FORK	1
70112-8	FOOT BRAKE	1
70112-9	ALLEN KEY FOR WHEEL	2

Please note
This is a general guide for assembly of scooters. Some parts may be pre-assembled or included in an accessory.

FOLDING MECHANISM

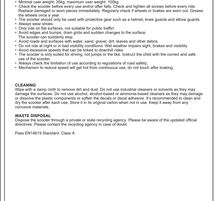

In order to put the scooter in its driving position, release the fold mechanism. For this, you need to pull the handle bar grip and pull the handle bar out and push it into its upright position. Close the handle bar and the front wheel are in the right driving position, let go of the handle bar grip and the quick release clamp will lock. Check if the handle bar is locked in place. To fold the scooter, release the quick release clamp and the handle bar can be lowered by turning the adjusting screw clockwise. In order to fold the scooter, conduct the above mentioned process backwards.

HANDLEBARS

-5-

EN

Scooter Cruise 145 XG

SAFETY WARNINGS
Please use this advice before using the scooter.
- This product is not a toy. Riding is for adults. Adults must support children with the first adjustments. until another. adjust handle bar and handle bar pull in and upright and fold scooter back and forward.
- This scooter is not a toy and must be used under adult supervision.
- Do not allow children under the age of 36 months to use the scooter, as the swallowed or inhaled by little children.
- Do not allow more than one child to use the scooter at one time.
- Minimal user weight: 36kg. maximum user weight: 100kg.
- Check the brakes before fitted use and after each use. Check and tighten all screws before every ride. Replace damaged or worn pieces immediately. Regularly check if wheels or brakes are worn out. Grease the wheels once a year.
- Always ride with protection gear such as wheel protective gear such as helmet, knee guards and elbow guards.
- Always wear shoes.
- Only ride on flat surfaces, not suitable for public traffic
- Avoid descending from edges, drain and sudden changes to the surface.
- The scooter can suddenly stop.
- Avoid roads and surfaces with water, sand, gravel, dirt, leaves and debris.
- Do not use the product at night or in conditions of reduced visibility. Senses impair sight, brakes and visibility.
- Avoid excessive speeds that can be linked to downhill rides.
- The scooter is only suited for driving, not jumps or the like. Instruct the child with the correct and safe use and driving.
- Always check the limitation of use according to regulations of road safety.
- Mechanism to reduce speed will get full from continuous use. do not touch after braking

CLEANING
Use a dry or damp cloth to remove dirt and dust. Do not use industrial cleaners or solvents as they may damage the surface. Do not use abrasive, alcohol-based or ammonia-based cleaners as they may damage or dissolve the plastic components or soften the decals or decal adhesive. It's recommended to clean and lubricate the scooter after each use. Store it in its original carton when not in use. Keep it away from any corrosive materials.

WASTE DISPOSAL
Dispose the scooter through a private or state recycling agency. Please be aware of the updated official directives. Please contact the recycling agency in case of doubt.

Para EN14619 Standard. Class A

RO

Troteneta 145 XG

ИНСТРУКЦИЯ ЗА СГЛОБЯВАНЕ

Максимално тегло на потребителя за категория А & В
Максимално тегло на потребителя: 35 кг Максимално тегло на потребителя: 100 кг

ПОЗДРАВЛЕНИЯ ЗА ЗАКУПУВАНЕТО НА ТОЗИ ПРОДУКТ
Тоне предназначен за ежедневна употреба. Ако спазвате инструкциите, продуктът ще ви бъде от полза за дълъг период от време. Моля, прочетете внимателно ръководството за експлоатация преди монтажа. Моля, запазете ръководството за експлоатация за бъдеща справка. Продуктът е предназначен за лична домашна употреба.

ИЗПОЛЗВАНЕ НА ВАШИЯ ТРОТОАР
ВАЖНО: Извадете всичко от опаковъчния материал, уверете се, че е пълен и премахнете всичкия опаковъчен материал. Не използвайте продукта, преди да е напълно сглобен. Проверете всички елементи (и регулиране на суфикс) Моля, запазете ръководството за експлоатация, вашата фактура и транспортната опаковка.

ПРОВЕРКА ПРЕДИ УПОТРЕБА
Проверете дали всичко е на място и функционира преди/след всяко/всяко/ще/ще/ще